

# VOTRONIC

## Installation and Operating Manual

### Charging Converter, B2B Battery to Battery, Optimal Battery Charging During Driving:

VCC 1212-50	Input Voltage 12 V	Charging Capacity 12 V / 50 A	No. 3326
VCC 1212-70	Input Voltage 12 V	Charging Capacity 12 V / 70 A	No. 3328
VCC 1212-90	Input Voltage 12 V	Charging Capacity 12 V / 90 A	No. 3329



Please read the mounting instructions and the operating manual including the safety instructions attentively.

Particularly observe page 19 "Safety Regulations and Appropriate Application", prior to starting connection and start-up.

### ***Fully automatic Battery Charging Converter for special purpose vehicles, high-quality campers, boats.***

The charging converters (**boosters**) of series "VCC" have been developed according to the latest regulations for supply battery (living area/board batteries) charging, mobile from the generator (starter battery) during driving.

In contrast to conventional cutoff relays, the charging voltage will be raised or lowered according to the default values of the charging program. Thus, they are particularly suitable for **vehicles according to the EURO Standard 6, 6 +**.

**Eight (8) selectable charging programs** for conventional board batteries in **lead- acid, lead-gel, lead-AGM or advanced lithium LiFePO4 technology** ensure unattended, quick and gentle full charging from any charging state with subsequent trickle charging and maintenance of the battery.

Even at short distances, the battery will be charged with full charging current. The simultaneous supply of the connected 12 V consumer loads is effected automatically, even in case of strongly loaded board mains. The automatic power control gives the required safety and ensures the vehicle's starting ability.

- The efficient charging converter ensures high charging capacity, already within short distances.
- Full charging when driving longer distances.
- It increases/reduces the voltage to the level, which is required for precise charging of the board battery with the optimum charging characteristic line.
- Cable losses and considerable voltage fluctuations of the generator, known from **Euro 6** vehicles (intelligent generators), are completely compensated.
- The charging converters excel by their compact design, low weight (high-frequency switch mode technology) and powerfully dimensioned power components for safe operation.
- Significantly improved energy balance of the board battery.
- There is no intervention into the starter circuit. The unit acts like a powerful consumer at the generator.
- The simultaneously supplied 12 V consumer loads are protected against overvoltage and voltage fluctuations.

### **Further Characteristics of the Unit:**

- The **charging voltage is free from peaks** and is **controlled** in such a way, that **overcharging** of the batteries is **excluded**.
- **Fully Automatic Operation:** The unit is permanently connected to the batteries, and it is automatically activated by the running generator of the vehicle. Battery discharge in case of an engine stop **is avoided**.
- **Parallel and Floating Operation:** In case of simultaneous consumption, the battery will either continue to be charged or maintained via trickle charging. Calculation and control of the adaptation of the charging times is effected automatically by the unit.
- **Unattended Charging:** Multiple protection against overload, overheating, overvoltage, short circuit, incorrect behaviour and back discharge of the battery by electronically controlled gradual reduction down to complete separation of unit and battery.
- **Integrated On-board Mains Suppression Filter:** Unproblematic parallel operation of charging sources (EBL, chargers, motor-driven and petrol-driven generators, solar systems) on one battery.
- **Charging Cable Compensation:** Automatic compensation of voltage losses on the charging cables.
- Connection for **Battery Temperature Sensor** (included in the standard delivery scope):  
Lead batteries (acid, gel, AGM): In case of **low outside temperatures**, full charging of the weak battery is **improved** by automatic adaptation of the charging voltage to the **battery temperature**, and in case of summery temperatures **unnecessary battery gassing** will be avoided.  
**LiFePO4** Batteries: Battery protection in case of high temperatures and particularly adapted charging in case of low temperatures below 0 °C.  
**Charging aid for deeply discharged lead batteries:** Gentle preliminary charging of the (lead-acid, gel, AGM) battery to 8 V, followed by powerful support of the battery, in case of **possibly switched-on consumers**.  
**Ensures** also automatic activation of a **LiFePO4 battery**, which had been switched off by the BMS.



#### Battery Lifetime and Efficiency:

- Keep the batteries cool, LiFePO4 preferably above 0 °C. Choose an appropriate location for installation.
- **Store only fully charged batteries and recharge them periodically.**
- **Open lead-acid batteries and batteries being "maintenance-free according to EN/DIN": Check the acid level periodically!**
- **Recharge deeply discharged lead batteries immediately!**
- **LiFePO4: Only use complete batteries with BMS and safety circuit.**  
**! Deep discharge is to be absolutely avoided !**

## Installation of the Unit

Install the charger near the board supply battery to be charged (for short charging cables) at a clean, level and hard mounting surface, which is protected from moisture, humidity and aggressive battery gases. The unit can be installed in any position.

Despite the charger's high efficiency, heat is produced, which is brought out of the casing by means of the built-in fan. The vent holes at the unit rear should never be covered (minimum distance 10 cm) to ensure full charging capacity. Ensure sufficient ventilation in the **environment of the unit** so that the heat can be dissipated. Otherwise, in the event of overheating, the charger will reduce its charging capacity.

## Unit Connection

a. Choose the appropriate connection plan for the application of the unit:

- 1** **Standard** connection plan, including options, for all types and power classes, page 3.
- 2** Combination with electroblock "EBL", "EVS" with further use of the cabling and fuses of the customer, which are already existing in the vehicle. Only suitable for VCC 1212-50, page 4.
- 3** Suitable for combination with electroblock "EBL", "EVS" with the existing cabling of the customer, however with separate VCC cabling. Suitable for **all VCC types** with full capacity, page 5.
- 4** **Special case:** In case of a cutoff relay of the customer, which exists in the vehicle and which is in a very difficult to access location or which is not accessible. Only suitable for VCC 1212-50, page 6.
- 5** **Special case:** In case of temporarily very high consumer current rates, such as with operation of a body air-conditioner during driving with powerful inverter, page 7.

Option: Usually, the Start IN "Vs- and Vs+" sensor cables are not required when observing the option notes for the tables 1, page 8.

Option: Usually, the Board OUT "Vb- and Vb+" sensor cables are not required when observing the option notes for the tables 1, page 8.

b. **Implement 3 power connections** observing the **tables 1, page 8:**

"Recommended Cable Cross-Sections, Cable Lengths and +Fuse Capacities".

**Reverse battery (+/- are mixed up) might result in serious damage of the unit!**



c. Produce the control connections. See description from **page 9**,  
"Configuration of the **9-pole Plug-in Terminal Strip** (Sensor Inputs and Terminal)"

## Unit Settings


- d. How to set the charging program "Board" battery (type, design, technology acid, gel, AGM, LiFePO4), from page 11.
- e. Adjustment of the further settings and functions, setting of the six (6) slide switches, from page 14, tables 2, 3, 4.

## Start-up and Function Test:

- f. Further description, see page 17.

Further operation of the unit is not required during normal automatic mode.

**1 Standard Connection Plan incl. Options, All Types:**

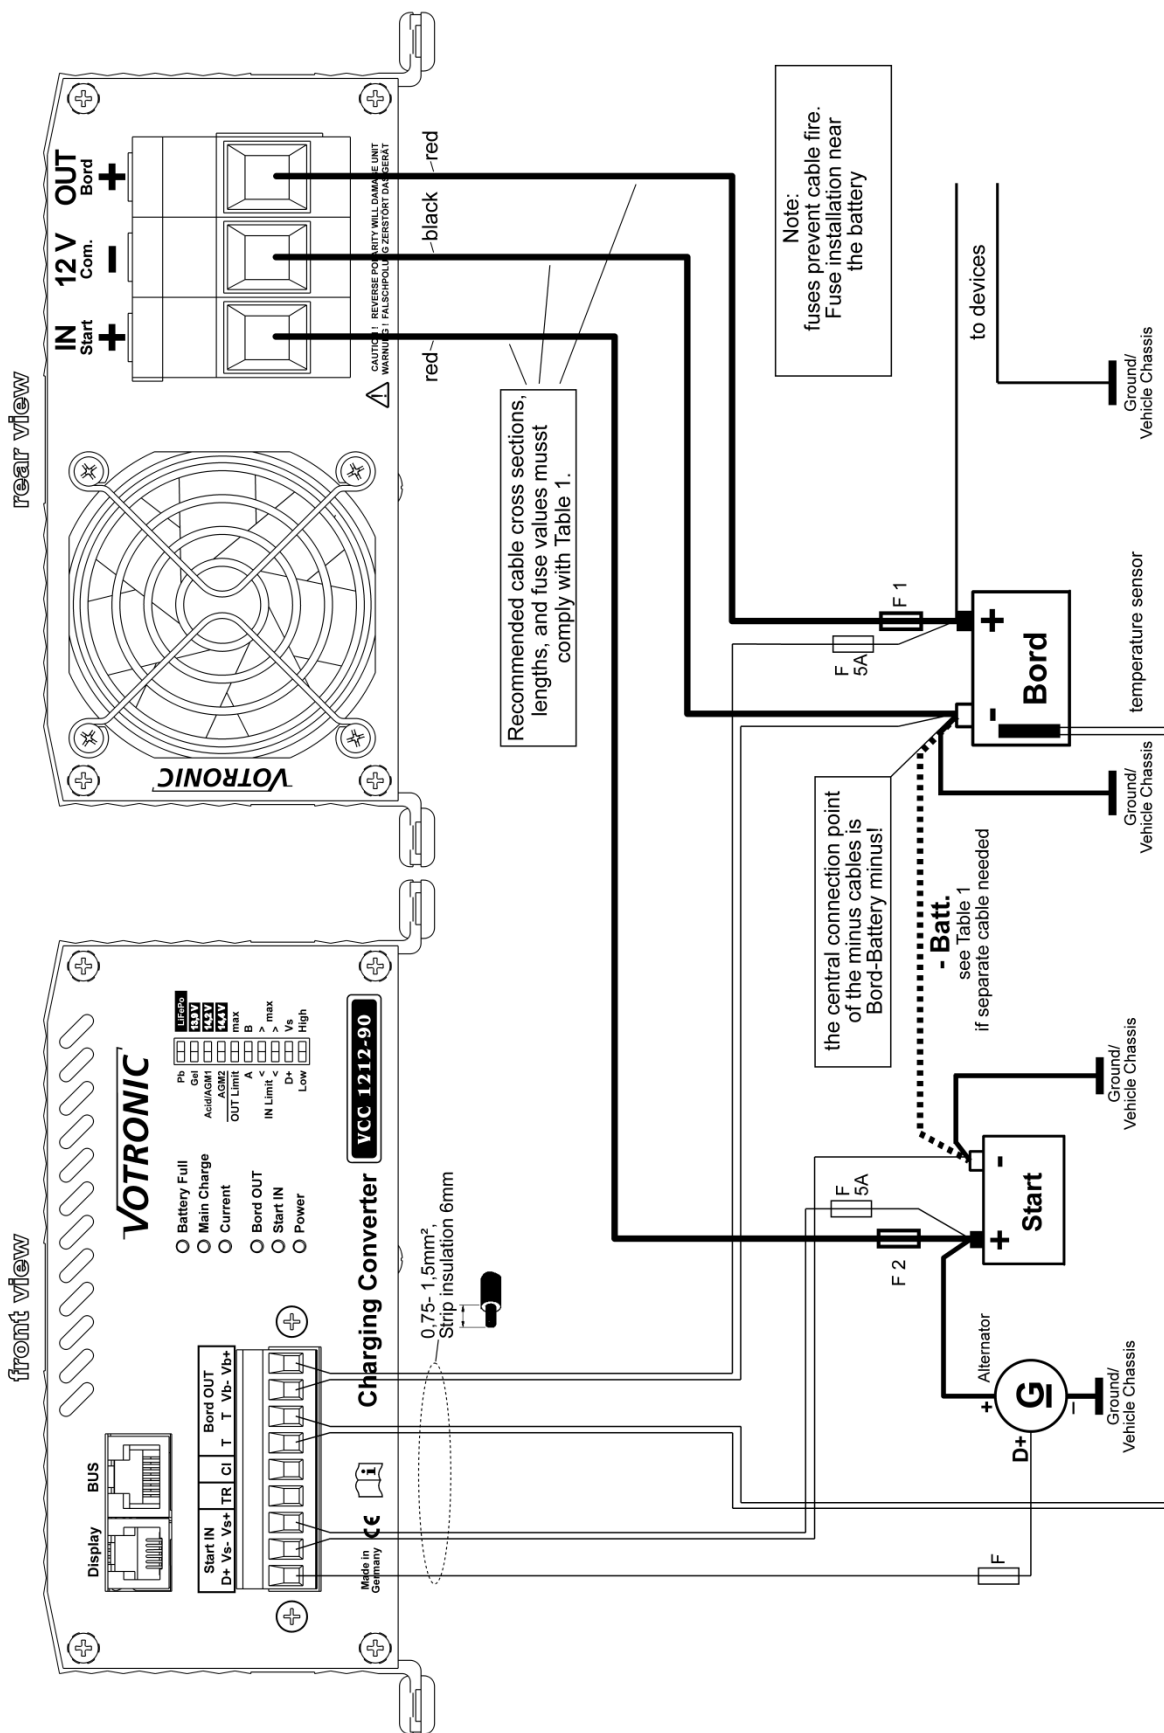


**Safety Instructions for All Connection Methods:**



- Observe the cross-sections and lengths of the cables.
- **Never mix up** the voltage sensor cables for start (Vs- and Vs+) and board (Vb- and Vb+)!
- Insert fuses near the battery for protection of the cables.
- **Reverse battery (12 V +/- mix-up)** at the large power terminals must be avoided in any case. This will result in serious damage of the unit!

- 2 In combination with electroblock "EBL", "EVS" with further use of the cabling and fuses, which are already existing in the vehicle, the cable to the starter battery must be disconnected. Only suitable for VCC 1212-50:

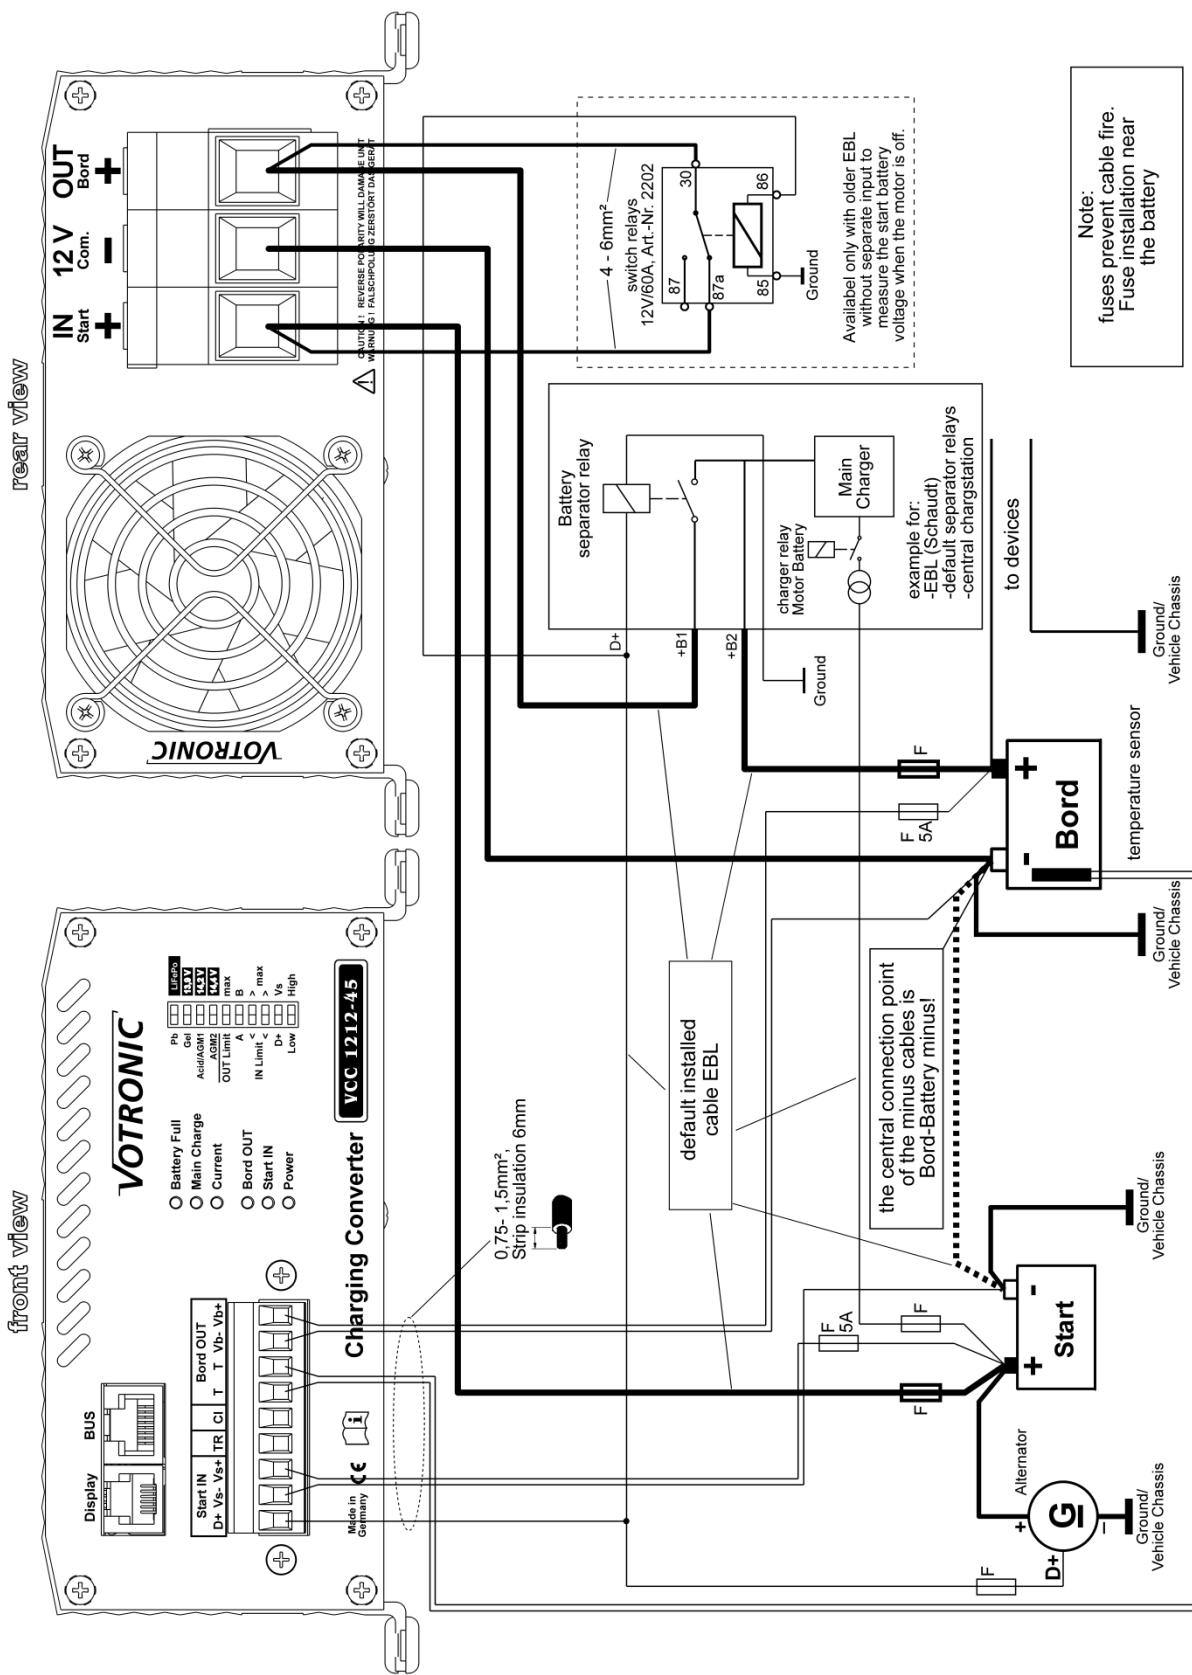


The cabling and the fuses for the electroblock EBL provided by the customer are further used.



VCC 1212-50: The switches "IN Limit", see table 3, page 14, can be used to eventually limit the maximum current draw from the vehicle's starter circuit to avoid an overload of the fuses and cabling of the customer. Please check!


For this reason, it cannot be used for the more powerful types VCC 1212-70 / 90 ! See page 5.

- 3** In combination with electroblock "EBL", "EVS" with the existing cabling of the customer, however with separate VCC cabling, suitable for **all VCC types 50 / 70 / 90** with full capacity:

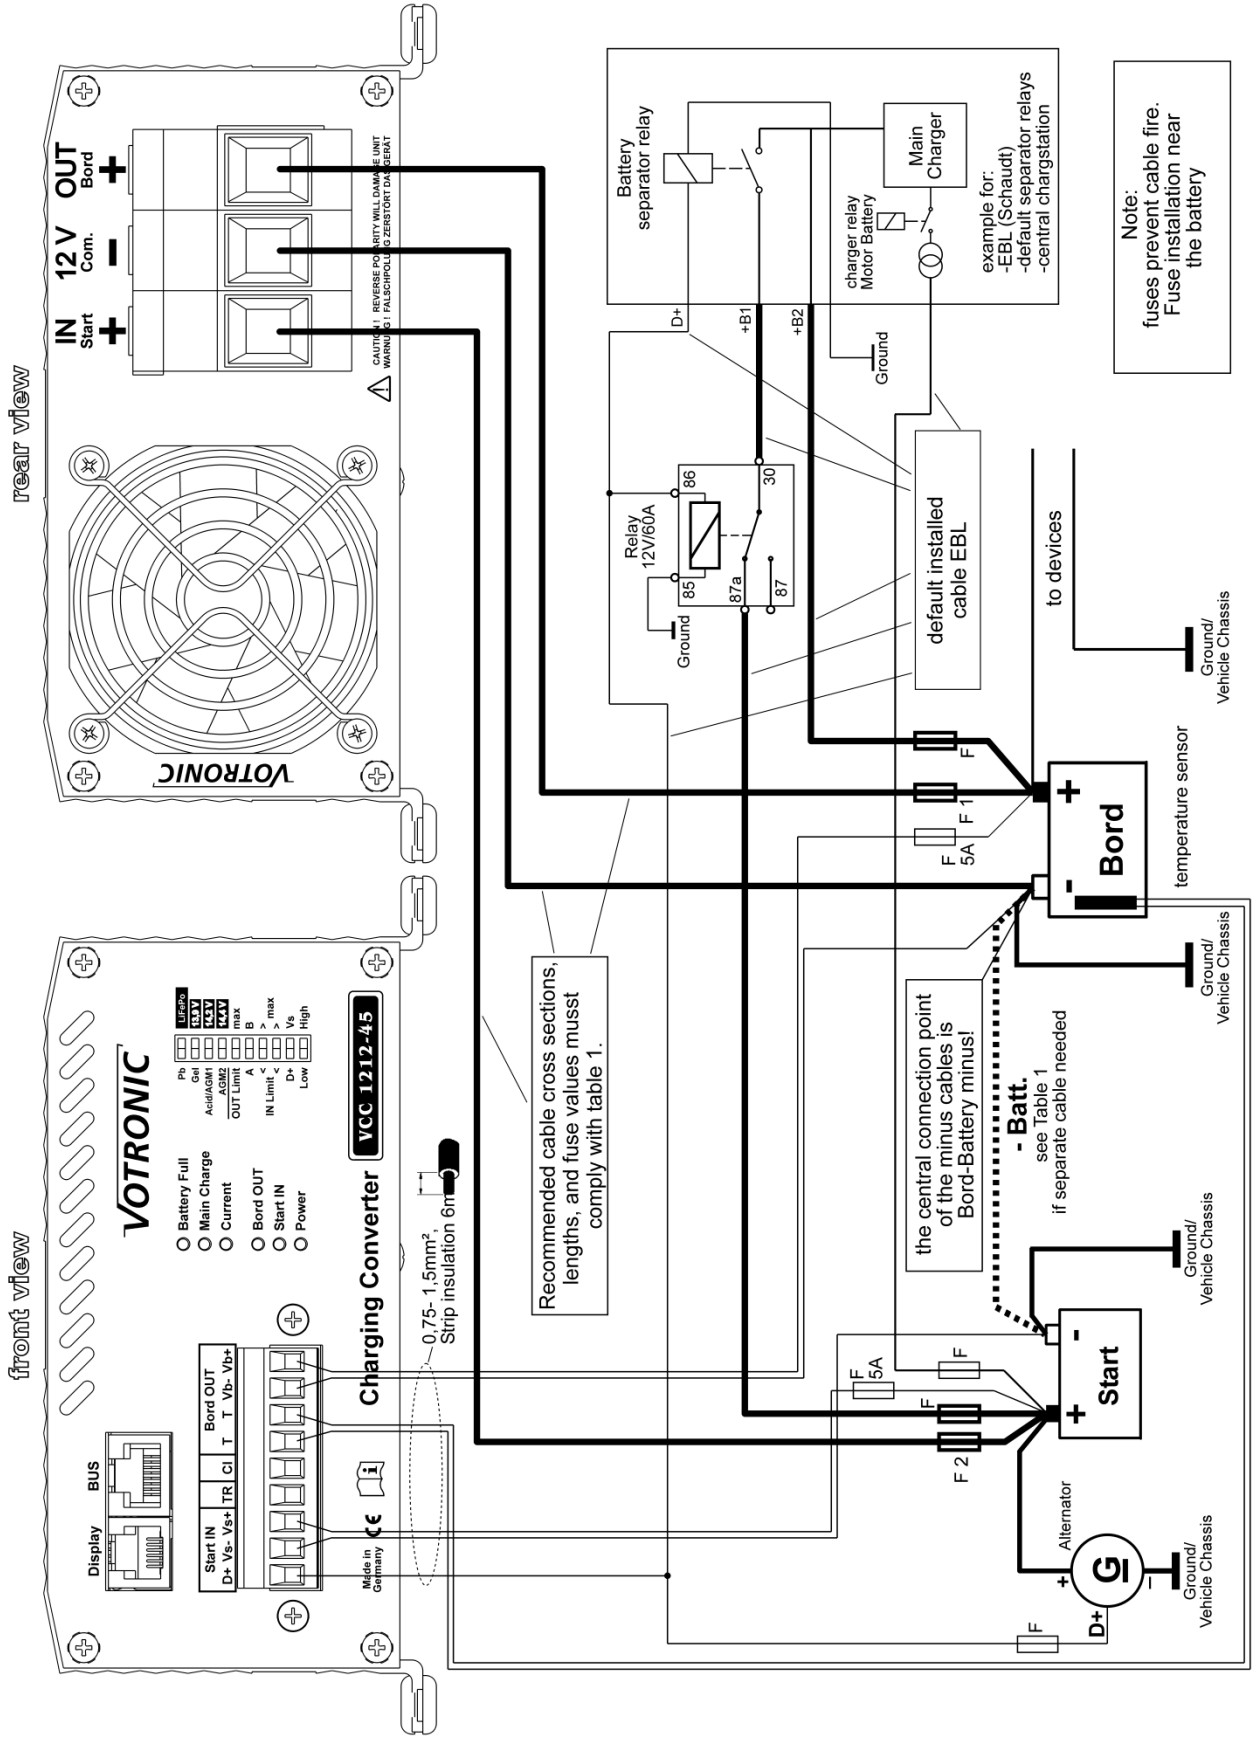

The cabling and the fuses for the electroblock EBL provided by the customer are further used. For this purpose, insert a switching relay 12 V / 60 A, order No. 2202, into the cable EBL start. Connect the ("NC normally closed contact" **87a**). It prevents bridging of the charging converter by the cutoff relay being installed in the EBL.

- 4 Special case:** In case of a cutoff relay of the customer, which exists in the vehicle and which is in a very difficult to access location or which is not accessible, disconnect the cable to the starter battery. Only suitable for VCC 1212-50:

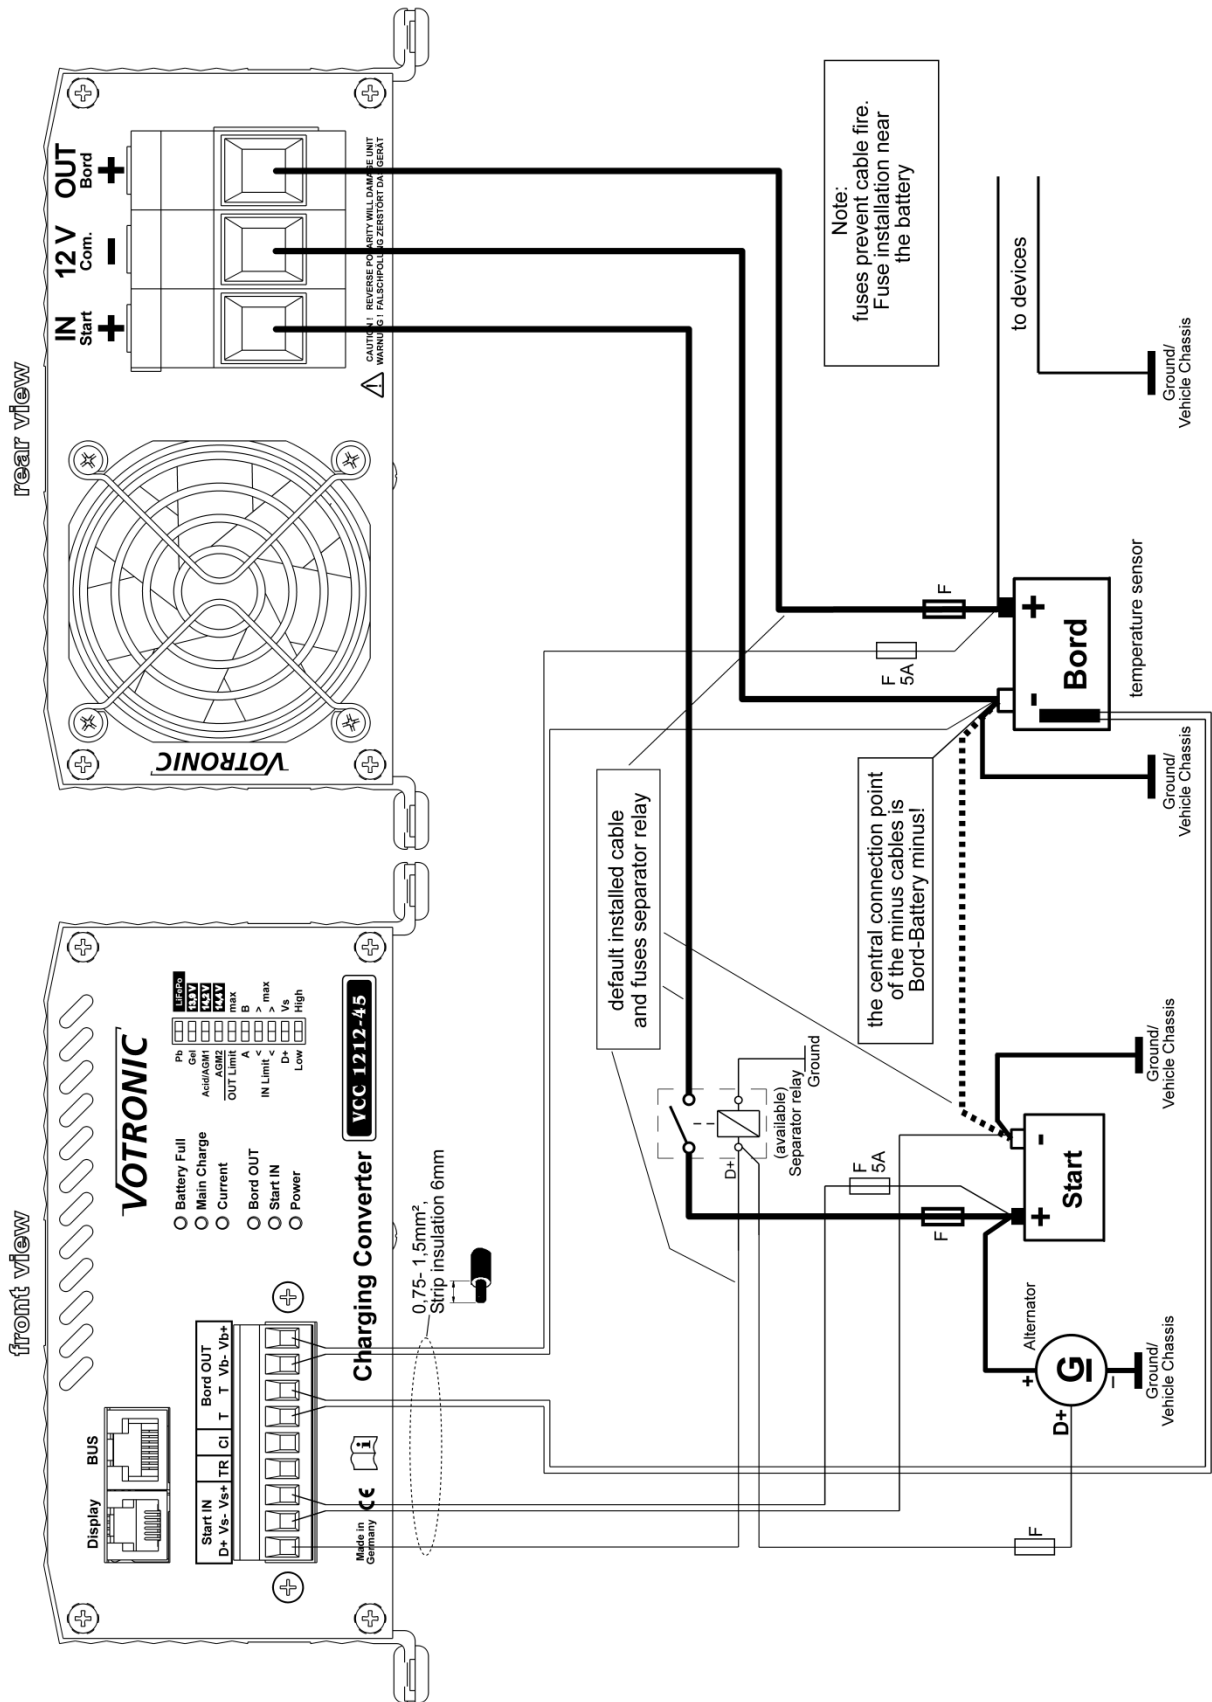


The cabling with the fuses and the cutoff relay provided by the customer are further used.



**VCC 1212-50:** The switches "IN Limit", see **table 3, page 14**, can be used to eventually limit the maximum current draw from the vehicle's starter circuit to avoid an overload of the fuses and cabling of the customer. Please check!

**For this reason, it cannot be used for the more powerful types VCC 1212-70 / 90 !**

- 5 **"TR" Bypass Relay:** Special case: In case of temporarily very high consumer current rates exceeding the maximum charger current of the charging converter, such as with operation of a body air-conditioner during driving with powerful inverter:

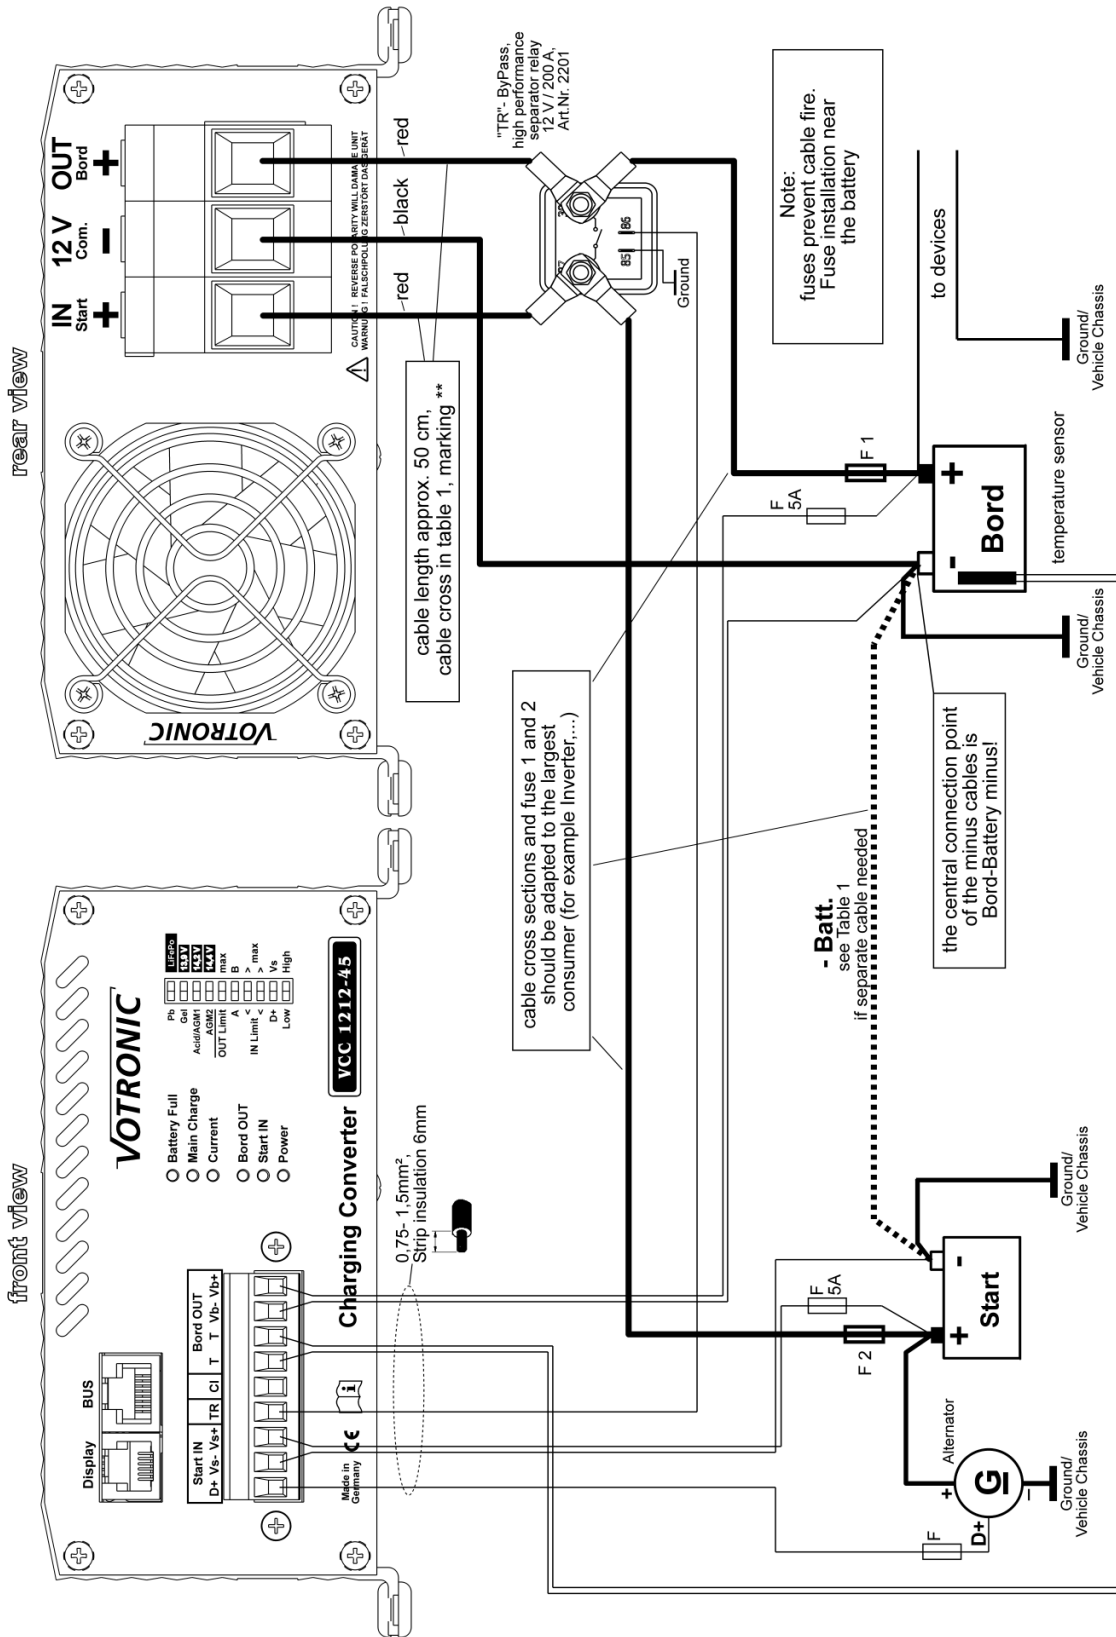

**Instructions for faultless function of this option:** Connect the charging converter VCC and the "TR" bypass relay with 2 x approx. 50 cm connection cables, cross-sections acc. to tables 1 (\*\*). The further cabling to the batteries, including different cross-sections, is to be done directly at the relay!

The 12 V current requirement of the inverter might be higher than the output capacity of the charging converter. Then, the charging converter activates automatically the high-performance relay, and the high consumer current can flow directly to the board battery, which will, however, not be charged, but must supply current instead. If the large consumer switches off, the charging converter separates that direct connection again automatically and resumes its (full) charging and control functions.

## Tables 1: Recommended Cable Cross-Sections, Cable Lengths and +Fuse Capacities

Configuration of the 3 large capacity terminals "Com. -", "OUT Board +", "IN Start +":

- **The central connection point of all minus cables for units and batteries** is the **- pole of the board battery!**
- As indicated, a cable "- Batt." is to be laid separately **between the two negative poles of the battery -START and -Board:**
  - ❖ In case of **insulated bodies!**
  - ❖ If required, for **relief** of the (lightweight) vehicle chassis for the most powerful unit types.
- If a **current measuring shunt** in the minus cable (for instance, of the battery computer) is used, the **central point** of all minus cables is at the **measuring shunt, but not at the board battery!**
- Full charging capacity is ensured, if the **cable cross-sections and cable lengths** are observed according to the below-mentioned **tables!**
- Option: The sensor cables Start IN "Vs- and Vs+" are often not required, if the below mentioned maximum values for "**Cable Length + START**" are only used to approx. 3/4 during operating mode 4 according to table 4, page 15.
- Option: The sensor cables board OUT "Vb- and Vb+" are often not required, if the below mentioned maximum values for "**Cable Length + BOARD**" are only used to approx. 2/3.

VCC 1212 - 50						
Cable Cross-section	Cable Length "+ START"	In case of insulated body: Cable Length "- Batt."	"Fuse 2" Cable Protection	Cable Length "- Com." to "- Board"	Cable Length "+ Board"	"Fuse 1" Cable Protection
6 mm <sup>2</sup>	-	-	-	0.5 - 1.5 m	0.5 - 1.5 m	60 A
10 mm <sup>2</sup> **	up to 5 m	up to 5 m	80 A	1.0 - 2.5 m	1.0 - 2.5 m	60 A
16 mm <sup>2</sup>	up to 8 m	up to 8 m	80 A	1.5 - 4.0 m	1.5 - 4.0 m	60 A
25 mm <sup>2</sup>	up to 11 m	up to 11 m	80 A	2.5 - 6.0 m	2.5 - 6.0 m	60 A

VCC 1212 - 70						
Cable Cross-section	Cable Length "+ START"	In case of insulated body: Cable Length "- Batt."	"Fuse 2" Cable Protection	Cable Length "- Com." to "- Board "	Cable Length "+ Board"	"Fuse 1" Cable Protection
16 mm <sup>2</sup> **	-	-	-	0.5 - 2.0 m	0.5 - 2.0 m	80 A
25 mm <sup>2</sup>	up to 8 m	up to 8 m	125 A	1.5 - 4.0 m	1.5 - 4.0 m	80 A
35 mm <sup>2</sup>	up to 10 m	up to 10 m	125 A	2.0 - 5.5 m	2.0 - 5.5 m	80 A

VCC 1212 - 90						
Cable Cross-section	Cable Length "+ START"	In case of insulated body: Cable Length "- Batt."	"Fuse 2" Cable Protection	Cable Length "- Com." to "- Board "	Cable Length "+ Board"	"Fuse 1" Cable Protection
16 mm <sup>2</sup> **	-	-	-	0.5 - 1.5 m	0.5 - 1.5 m	100 A
25 mm <sup>2</sup>	up to 6 m	up to 6 m	150 A	1.0 - 3.0 m	1.0 - 3.0 m	100 A
35 mm <sup>2</sup>	up to 9 m	up to 9 m	150 A	1.5 - 4.0 m	1.5 - 4.0 m	100 A

\*\* For special case: Use of the "TR" bypass relay in case of very high consumer current rates, cross-section of the two connection cables 50 cm between VCC and relay, page 7.



## Connection of the **9-pole Plug-in Terminal Strip** (Sensor Inputs, Terminal):

**Plug-in Terminal Strip:** In case of limited space, the strip can be **removed** and **reinserted** at any time for easy cable connection.

**Cable Cross-Sections:** 0,75 mm<sup>2</sup> or more.

**Length to be stripped:** approx. 6 mm.

**Protection:** All inputs and outputs of this terminal strip are protected against overvoltage, reverse battery and overload.

### "D+": Control input from the generator for function **on/off**:

Connect the terminal "D+" directly to the existing signal in the vehicle. The D+ signal is preferably to be used for the "active generator".

If the D+ signal does not exist in the vehicle, the signal "Ignition ON" (terminal 15) can be used for unit control. However:

**Warning:** When the engine is not running, the starter battery might be discharged!

*In case of pure **voltage control** of the unit, table 4, items 1. and 2., the terminal is to be left blank.*

### "Vs -" and "Vs +": **IN** Input voltage sensor/sense cables to the **STARTER** battery (option):

Measuring inputs for accurate battery **input voltage**:

With it, the unit is able to measure the exact voltage of the STARTER battery, independently of the voltage losses on the supply cables, and to draw conclusions from it concerning the condition of the STARTER battery (such as rating).

For this, connect the sense cables "Vs-" and "Vs+" directly to the poles of the STARTER battery. **Never** connect them to the interconnected distributors, ground or the like (voltage falsification)!

The cables are not required, if the values in the **tables 1** for "**cable length + START**" are only used to approx. 3/4. Then, leave the terminals blank.



*Never mix up the sensor cables **Start IN** ("Vs-"/"Vs+") and **Board OUT** ("Vb-"/"Vb+"), otherwise the voltage control of the unit will be led astray!*

### "TR": Terminal for external bridging relay, see page 7, Special Case

"TR Bypass Relay in case of temporarily very high consumer current rates". **If not used**, leave the terminal blank.

*The rating of the **output** is **max. 1 A**, and it is protected with a thermal fuse, which resets itself after removal of the overload and reactivates the output.*

### "CI": Connection without function, leave the terminal blank.

### "T T": Measuring input for the **temperature** of the **board** supply battery:

Connect the temperature sensor to the **terminals "T T"** (any polarity). Further details concerning the functions of the sensor can be found under the paragraph "**Battery Temperature Sensor**" and in the charging characteristic lines.

### "Vb -" and "Vb +": **OUT** Output voltage sensor/sense cables to the **board** battery (option):

Measuring inputs for exact measurement of the **board** battery voltage (output voltage):

The unit uses the sense cables for the exact measurement and control of the charging voltage at the board battery to be charged, independently of the voltage losses on the charging cables. For this, connect the sense cables "Vb-" and "Vb+" directly to the poles of the board battery. **Never** connect them to the interconnected distributors or the like (voltage falsification)!

The cables are not required, if the values in the **tables 1** for "**cable length + BOARD**" are only used to approx. 3/4. Then, leave the terminals blank.



*Never mix up the sensor cables **Board OUT** ("Vb-"/"Vb+") and **Start IN** ("Vs-"/"Vs+"). Otherwise the voltage control of the unit will be led astray!*

*If several batteries are connected in parallel as battery system (battery bank), cross connection is required:*

- Connect "Vb-" to the negative pole of the 1<sup>st</sup> battery.
- Connect "Vb+" to the positive pole of the 2<sup>nd</sup> or last battery of the system.

*The charger will automatically recognize and evaluate the sensor cables.*



***If the sensor cables are not installed**, or in case of a cable break or fuse failures, it will be switched to normal operation with charging cable compensation, that means, the calculated compensation of the voltage losses on the charging cables within the values in the **tables 1**.*

## Connection "Display":

Plug-type connection for either a LED Remote Control S (order No. 2076) or an LCD Charge Control S-VCC (order No. 1248). Further information can be found in the corresponding operating manual.

## Battery Temperature Sensor:

Connect the temperature sensor (included in the standard delivery scope) to the **terminals "T T"** (any polarity).

The temperature sensor controls the **temperature** of the board supply **battery**.

**Ensure that the installation place of the sensor is not influenced by any source of heat (engine heat, exhaust, heater etc.)!**

### Lead-Acid, Gel, AGM Batteries:

**Installation:** The **thermal contact** of sensor and **battery inside temperature should be well**. Thus, it should be screwed down to the negative pole or positive pole of the battery. It is also possible to fasten it at the sidewall centre of the battery casing.

**Function:** The temperature-dependent charging voltage of the board battery will be adapted automatically to the battery temperature (automatic temperature equalization). For this purpose, the temperature sensor measures the battery temperature. In case of low temperatures (winter operation), the charging voltage will be increased in order to improve and accelerate full charging of the weak battery. Sensitive consumers are protected by a voltage limitation in case of very low outside temperatures.

In case of summery temperatures, the charging voltage is reduced to minimize the load (gassing) of the battery and to extend the lifetime of gas-tight batteries.

**Battery Protection:** In case of excessive battery temperatures (from +50 °C), the charging voltage will be reduced strongly to the **safety charging voltage** of approx. 12.80 V for battery protection, and the maximum charging current rate will be halved (safety mode, LED **"Board OUT" is flashing**). Any charging data being recorded hitherto will be kept in memory. Battery charging is then interrupted, but the supply of possibly connected consumers will be continued by the unit, and the battery is allowed to cool down. After that, automatic charging will be resumed. Also refer to:

**"Lead batteries, 4 characteristic lines, charging voltage rates and temperature equalization" from page 11.**

The unit recognizes automatically a missing sensor, cable break or short circuit of the sensor cables, as well as unreasonable measuring values. In that case, it will switch automatically to the usual charging voltage rates of 20 °C / 25 °C being recommended by the battery manufacturers.

### LiFePO4 Batteries:

**Installation:** The **thermal contact** of sensor and **inside temperature of the battery should be well**. Thus, it should be screwed down to the **negative pole** of the battery, because in most of the cases, this is the cooler side (the positive pole is often biased by the exhaust heat of internal fuses of the battery, electronic systems for cell equalization, balancers etc.)

**Function:** In case of abnormal battery temperatures, such as < -20 °C, > 50 °C, the charging voltage will be reduced strongly to the **safety charging voltage** of approx. 12.80 V for battery protection, and the maximum charging current rate will be halved (safety mode, LED **"Board OUT" is flashing**). Any charging data being recorded hitherto will be kept in memory. Battery charging is then interrupted, but the supply of consumers being possibly connected will be continued by the charger until the battery temperature is again within the acceptable range. After that, automatic charging will be resumed.

In case of temperatures **below 0 °C, the charging current will be reduced considerably for battery protection**, the LED **"Board OUT"** will turn off every 2 seconds, and longer charging times can be expected. Also refer to **4 Characteristic Lines** for **"LiFePO4 Batteries, Charging Voltage Rates and Temperature Control"**, from **page 12**.



Warning: If the charging characteristic line had been set for a LiFePO4 battery, the temperature sensor must be connected for reasons of battery safety. Otherwise, the unit will not operate, and the LED **"Main Charge"** will be **flashing!**

## Option: Several Batteries at the Charging Port:

Parallel charging of two or several batteries of the same voltage (12 V) is admissible. For this purpose, the batteries are connected "in parallel". The capacity values (Ah) are summed up. **The total capacity (total Ah) should not exceed the recommended maximum battery capacity.**

According to the battery manufacturers, **permanent parallel operation** is admissible in case of two or several batteries of the same voltage, same type, same capacity, and of about the same age (history).

*Example: Connection in parallel of 2 batteries (cross connection):*

*Both positive poles must be connected with a powerful cable. Also both negative poles must be connected with a powerful cable.*

*Now, the supply cables are connected advantageously "in cross connection", which means*

*Minus supply cable at negative pole of battery "1".*

*Plus supply cable at positive pole of battery "2".*

*This ensures that both batteries "1" and "2" of the system will receive/supply the same voltage.*

## Unit Settings:

Carefully move the **10 micro slide switches** behind the front panel of the unit to the desired position using a small screw-driver. The **control levers** are shown in **white**.

### 1.) How to Set the Battery Type "Board"- (Design, Technology):

**Eight (8) charging programs** for the different battery types are stored in the unit.

They can be selected by means of the **upper 4 slide switches**:

If not being specified divergently by the battery manufacturer, the suitable charging program for the board supply battery can be determined by means of the following description and the technical data (voltage rates U1 and U2).



The possible parallel/floating operation with consumer loads being connected to the board battery is also automatically considered by all charging programs.

**TS** = Temperature Sensor (Effect with/without connection of the temperature sensor)

### Charging Programs for Lead Batteries (Acid, Gel, AGM):

4 Characteristic lines, charging voltage rates and temperature equalization for batteries in lead technology:


#### 1 "Lead Acid"

U1=14.40 V U2=13.50 V  
2-6 h

Universal charging program for **acid-lead-acid batteries** acc. to DIN 57 510/ VDE 0510 for charging and trickle charging of supply (board) batteries.

Ensures short charging times, high charging factor and acid mixing for open standard batteries and closed, SLA, low-maintenance, maintenance-free "non-solid electrolyte", "lead-acid", drive, lighting, solar and heavy-duty batteries. Also suitable for recently developed batteries (low-antimonous, with silver-alloy, calcium or similar) and batteries with low (L) and very low (VL) water consumption.

Switch Position

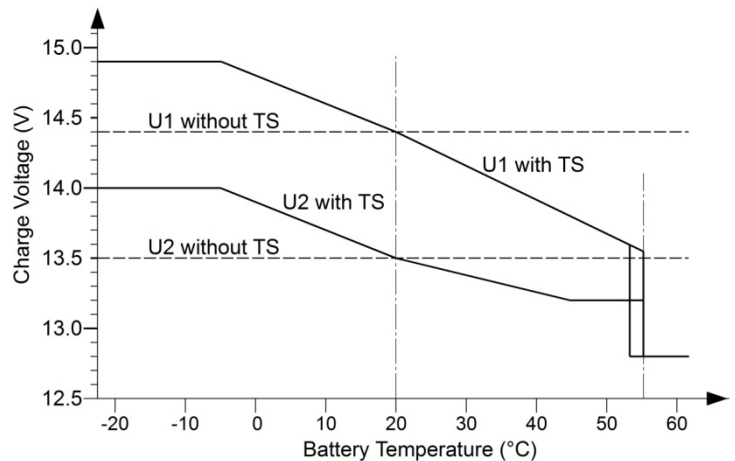


#### 2 "Gel"

U1=14.40 V U2=13.80 V  
6-12 h

Adapted to closed, gas-tight **Gel/dryfit** batteries **VRLA** with determined electrolyte, which are generally requiring longer dwell times U1 to achieve particularly high capacity storage and to avoid deep discharge (becoming deaf) of the battery, such as EXIDE, Sonnenschein, "dryfit", Varta, Bosch, Banner, Mobil Technology etc. If not being specified divergently by the battery manufacturer, also recommended for batteries in round cell technology, such as EXIDE MAXXIMA (DC).

Switch Position

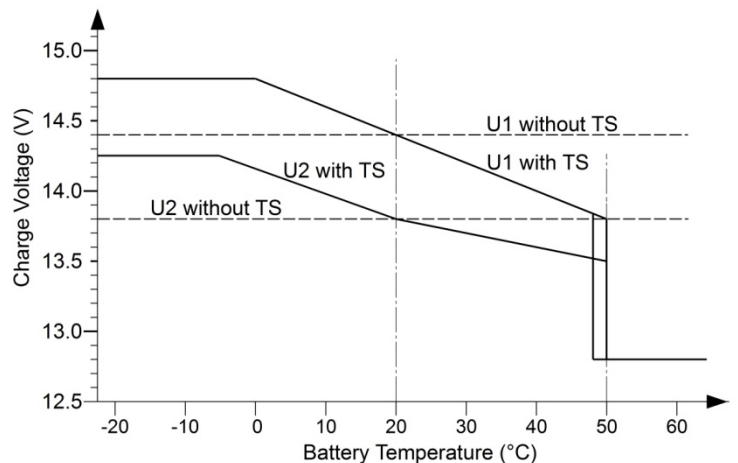


### 3 "AGM 1 14.4 V"

Switch Position



U1=14.40 V U2=13.50 V  
1.5-5 h

Adapted to closed, gas-tight AGM (absorbed glass mat)/lead-fleece batteries **VRLA** with indicated charging voltage "14.4 V".

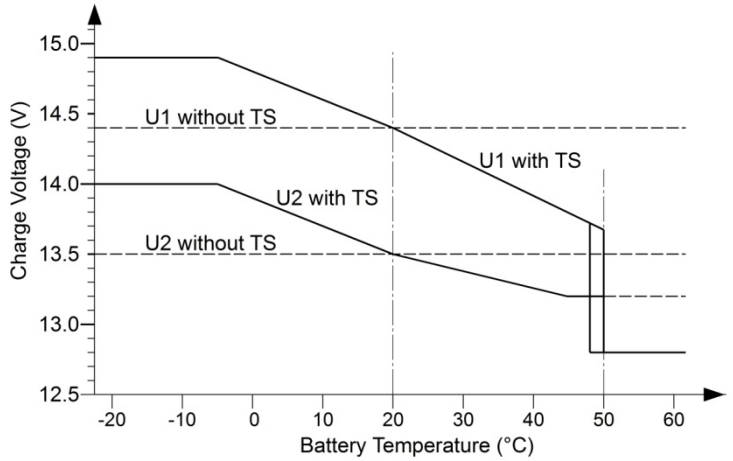


### 4 "AGM 2 14.7 V"

Switch Position



U1=14.70 V U2=13.60 V  
1.5-5 h

Adapted to closed, gas-tight AGM (absorbed glass mat)/lead-fleece-batteries **VRLA** with indicated voltage "14.7 V or 14.8 V". It is highly recommended to check the specification sheet of the battery concerning the high charging voltage U1 **14.7 V!**

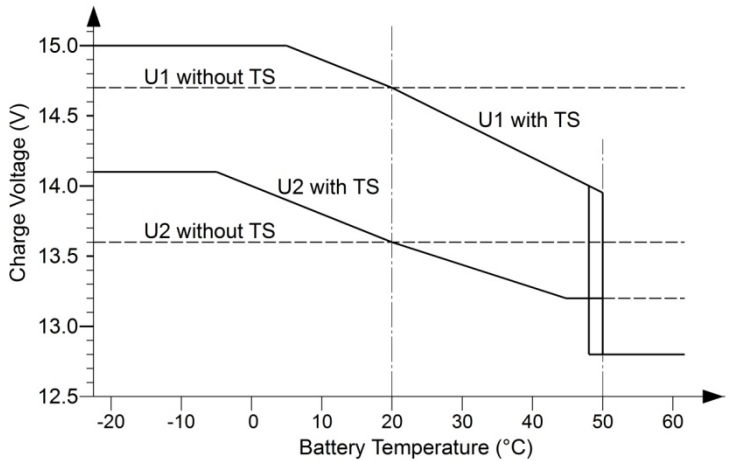

## Charging Programs for **LiFePO4** Batteries:

4 Characteristic lines, charging voltage rates and temperature control adapted to lithium batteries:



- **Observe the instructions of the battery manufacturer!**
- **An operation of the unit at a LiFePO4 battery without BMS Battery Management System and without equalization charging of the cells (balancing) as well as safety circuit is not admissible!**
- **The battery temperature sensor must be installed at the battery (screw to the negative pole) and must be connected at the unit. It serves as protection for the battery. No function without temperature sensor, LED "Main Charge" is flashing!**
- If possible, the battery temperature should be kept above 0 °C.

### 5 "LiFePO4 13.9 V"

Switch Position




U1=13.90 V U2=13.90 V  
0.5-1 h

Adapted to

- **Domestic "eStore"**

of the indicated capacity rates.

Operation of the battery only with own BMS and prescribed safety circuit!

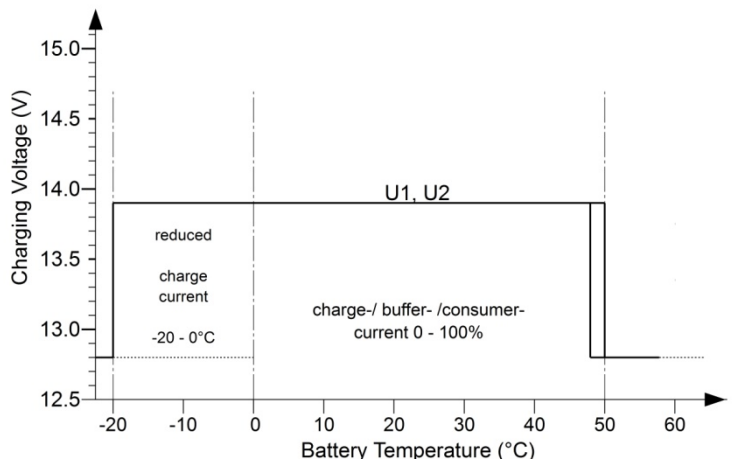




- The charging regulations of the battery manufacturer are absolutely to be observed!
- An operation of the unit at a LiFePO4 battery without **BMS Battery Management System** and without **equalization charging of the cells (balancing)** as well as **safety circuit** is not admissible!
- The battery temperature sensor must be installed at the battery (screw to the negative pole) and must be connected at the unit. It serves as protection for the battery. No function without temperature sensor, LED "Main Charge" is flashing!
- If possible, the battery temperature should be kept above 0 °C.

## 6 "LiFePO4 14.2 V"

 Switch Position




U1=14.20 V U2=13.60 V  
0,5 h

Adapted to

- Victron LFP-BMS 12,8
- TransWatt TH 12/xxx

of the indicated capacity rates.

Operation of the battery only with own BMS and prescribed safety circuit!

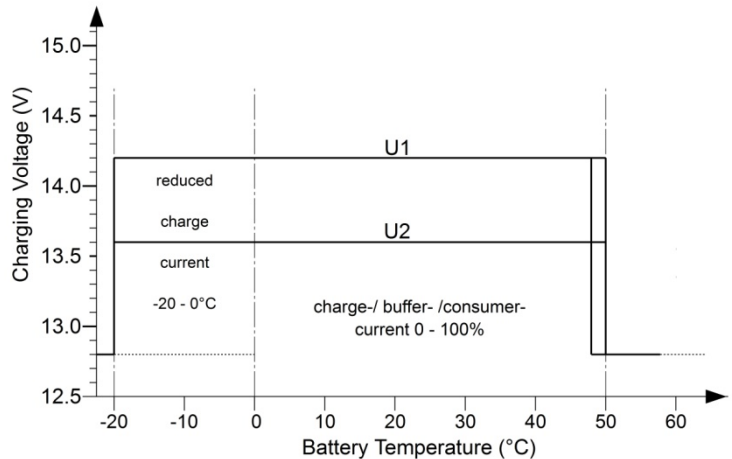

## 7 "LiFePO4 14.4 V"

Switch Position



U1=14.40 V U2=13.80 V  
0.3-1 h


Adapted to

- MT Büttner Elektronik MT-Li - Series

of the indicated capacity rates, types with integrated safety circuit and integrated BMS.


- Super B SB12VxxE
- GNB/Exide SL12 xxxHC with BMS

of the indicated capacity rates. Operation only with own BMS and prescribed safety circuit!

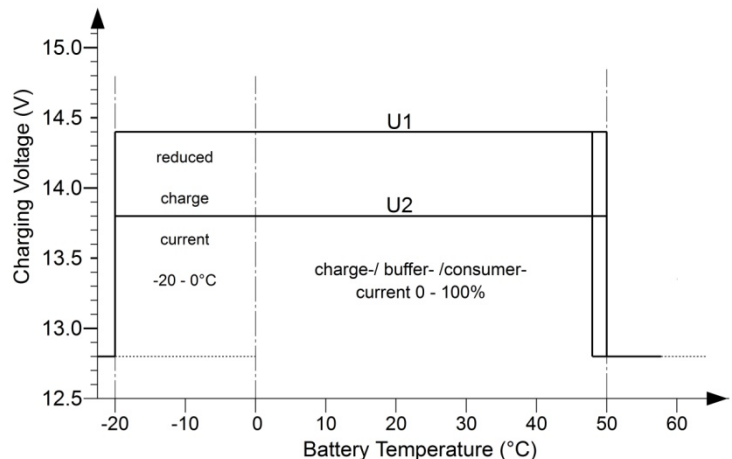

## 8 "LiFePO4 14.6 V"

 Switch Position




U1=14.60 V U2=13.80 V  
0,3 h

Adapted to

- Super B SB12Vxx - M (Epsilon)
- RELION Types "RB"

of the indicated capacity rates, types with integrated safety circuit and integrated BMS.

Operation of other batteries only with own BMS and prescribed safety circuit!

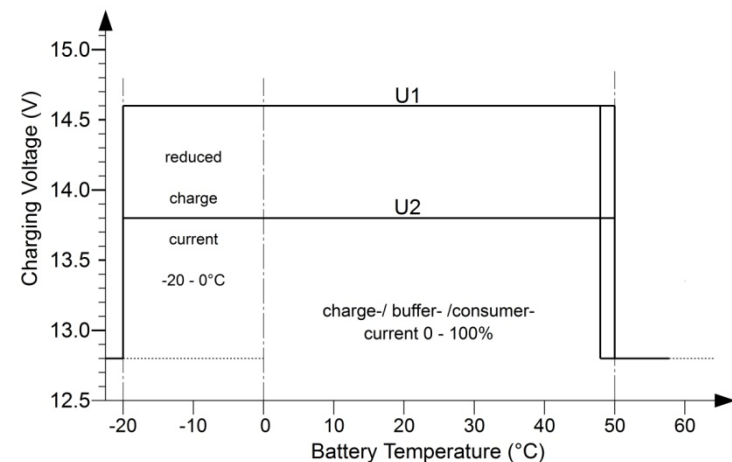

## 2.) Further Settings and Functions, 6 Slide Switches:



### OUT Limit – max (Reduction of the charging current to the board battery):

**Output** side of the charging converter:

The switch can be used to limit the maximum charging current, in order to be able to charge also smaller batteries or to avoid an overload of an existing electroblock EBL of the customer:

**Table 2:**

Switch Position	VCC 1212 - 50	VCC 1212 - 70	VCC 1212 - 90
<b>Right: "max." Charging Current:</b>	0 A - 50 A	0 A - 70 A	0 A - 90 A
<b>Left: "OUT Limit" Charging Current:</b>	0 A - 39 A *	0 A - 50 A	0 A - 75 A



### A – B (Auxiliary charging can only be used with control D+):

How to activate the integrated **auxiliary charging** for the STARTER battery:

In case of external charging of the BOARD battery (for instance by means of a mains supply charger), the auxiliary charging for automatic support charging and trickle charging of the vehicle's (lead) starter battery can be optionally used for extended standstill periods and current consumption at the starter battery (such as by own current draw of the vehicle, lighting, audio equipment etc.). For this purpose, a part of the charger current is diverted to the starter battery. It is controlled and supervised to avoid overload of the starter battery.

*If a mains supply charger and / or a solar charging controller or an electroblock EBL with a separate **charging port** for the **starter** battery is existing in the system, the function "auxiliary charging" of the charging converter is not required and should be **switched off ("A")**.*

Switch position **to the left "A"**: Auxiliary charging is switched-off permanently.

Switch position **to the right "B"**: Auxiliary charging is activated. When the BOARD battery had been charged sufficiently, the starter battery will be automatically and simultaneously charged with 0.3 A / 5 A.





### IN Limit – max (Limitation of the current draw from the starter circuit/generator):

**Input** side of the charging converter:

The 2 switches can be used to limit the maximum current draw of the charging converter from the STARTER battery, such as for low capacity generators, plug-type connectors or other interlinks in the supply circuit, for instance removable cutoff relays, fuses, weak cables etc., which are less loadable.

The influence of the switches becomes apparent, if the charging converter must do most of the work due to high charging current and high charging voltage at the output (i. e. the board battery is already close to being fully charged) and low voltage at the input in the STARTER circuit at the same time.

**Table 3:**

Switch Position	Limit Max. Current Draw from the STARTER Circuit / of the LiMa		
	VCC 1212 - 50	VCC 1212 - 70	VCC 1212 - 90
IN Limit  max	68 A	95 A	125 A
IN Limit  max	49 A (EBL Mode *)	77 A	100 A
IN Limit  max	42 A (EBL Mode *)	63 A	82 A
IN Limit  max	33 A (EBL Mode *)	50 A	64 A





\* Please check, if the existing cables and fuse capacities of the customer are used and depending on the efficiency of the electroblock EBL.

## How to set the **operating mode** of the starter battery (IN, input side)

The automatic control (activation) of the charging converter after the engine start can be executed in two different ways:

- In case of special applications, voltage-controlled by the increased voltage of the starter battery with running engine (not for EURO 6 vehicles!)
- Recommended with vehicle "D+" signal (generator active, recommended) or with ignition on (vehicle terminal 15).

**Table 4:**

<b>Selector Switch</b>	<b>IN Input Side</b> of the Charging Converter: Set the operating range and the behaviour of the charging converter up to the starter circuit. Also refer to "Function of the Power Control at Starter Battery and Generator", page 17.
	<p><b>1. Pure voltage control</b> of the charging converter, leave terminal "D+" blank:                      Because of the high voltage thresholds, only to be used with "<b>Vs-</b> and <b>Vs+</b>" start sensor cables, sufficiently dimensioned cable cross-sections and powerful generator.  <i>The starter battery will not be discharged under any circumstances.</i></p> <p>Increase of the charging capacity: &gt; 13.50 V                      Reduction of the charging capacity: &lt; 13.20 V                      Switching off threshold: &lt; 13.00 V 30 sec.</p>
	<p><b>2. Pure voltage control</b> of the charging converter, leave terminal "D+" blank:                      Like <b>1.</b> However, lower switching thresholds, negligible load of the starter battery.</p> <p>Increase of the charging capacity: &gt; 13.30 V                      Reduction of the charging capacity: &lt; 13.00 V                      Switching off threshold: &lt; 12.80 V 30 sec.</p>
	<p><b>3. Activation of the Charging Converter by Control Signal "D+" or ignition "Kl.15".</b>                      Because of the average-high voltage thresholds, only to be used with "<b>Vs-</b> and <b>Vs+</b>" starter sensor cables, sufficiently dimensioned cable cross-sections and powerful generator.  <i>Note: A continuous signal at "D+" without running engine might discharge the starter battery!</i></p> <p>Increase of the charging capacity: &gt; 12.50 V                      Reduction of the charging capacity: &lt; 12.20 V                      Switching off threshold: &lt; 12.00 V 30 sec.</p>
	<p><b>4. Activation of the Charging Converter by Control Signal "D+" or ignition "Kl.15".</b>                      This operating mode is particularly provided for <b>EURO standard 6, 6+ vehicles</b> with intelligent generators, energy management, start/stop automatics, strongly varying voltage of generator/starter battery during energy recovery etc.                      Generally recommended for operation with electroblock <b>EBL, EVS.</b>                      The start sensor cables "<b>Vs-</b> and <b>Vs+</b>" are not required, if the values in the <b>tables 1</b> for "<b>Cable Length "+ START"</b> are only used to approx. 3/4.                      If the cables are long (losses), these cables are, however, advantageous for full charging capacity.  <i>Control the control input "D+" either with Kl.15 (ignition ON) or <b>more safely</b> connect it to <b>D+</b> of the vehicle (generator "active"), since in case of a continuous signal (ignition ON) without running engine the starter battery can be <b>strongly</b> discharged!</i></p> <p>Increase of the charging capacity: &gt; <b>11.70 V</b>                      Reduction of the charging capacity: &lt; <b>11.40 V</b>                      Switching off threshold: &lt; <b>11.20 V</b> 30 sec.</p>

### Option: Parallel Connection of Two Charging Converters:

An increase of the charging capacity for large battery systems or high loads (such as operation of an air-conditioning system with low capacity units) can be realized by parallel connection of two identical units. Couple the connections and set **both units** to switch position "4" according to table 4.



The separately laid "**Vs-** and **Vs+**" start sensor cables are to be distributed to the inputs of both units, also the "D+" control signal.

Due to the occurring high current rates, the required **cable cross-sections** of the power supply connections must be multiplied by two, or they must be **observed (tables 1)** absolutely in case of separate laying.

## Pilot Lamps:

### "Battery Full" (Board battery fully charged, **green**):

- If it is on: Battery has been charged to 100 %, trickle charge U2, finished.
- If it is flashing: Main charging process is effected in the charging phase U1, indication of the charging state of 75 % (lead), approx. 90 % (LiFePO4) (short flashing), gradual increase to 100 % (long flashing).
- Off: Main charging process is still being executed in the phase I.

### "Main Charge" (Main charging board battery, **yellow**):

- If it is on: Main charging process is effected in the charging phase I or U1.
- Off: Trickle charge U2.
- If it is flashing:
  1. Battery temperature sensor is not connected with charging program LiFePO4!
  2. External overvoltage board battery > 15.50 V after 20 seconds, automatic reset after drop to the normal nominal voltage.

### "Current" (Charging Current, **red**):

- The lighting intensity will be **reduced or increased depending on the supplied charging current**.

### "Board OUT" (Board battery, **yellow**):

- If it is on: The board battery will be controlled and charged during operation.
- If it turns off shortly every 2 s: Only LiFePO4: Battery temperature below 0 °C. The charging current can be reduced for battery protection for all modes of charging. If the battery is discharged, longer charging times.
- If it is flashing: Battery Protection: Battery overtemperature > 50 °C (depending on type), switchover to low safety charging voltage and half of the max. charging current. Automatic return, as soon as the temperature is 2 °C less.

### "Start IN" (Starter Battery, **yellow**):

- If it is on: Pilot lamp for the starter battery during operation.
- If it is flashing: The voltage of the starter battery is too low or too high (only with D+ control).
- Is flashing shortly every 2 sec.: During idle mode and external charging of the board battery (such as mains supply charger, solar) auxiliary charging for the starter battery is active to keep its starting capacity (only with switch position "B", see page 14).

### "Power" (Mains, **red**):

- If it is on: The charging converter had been activated and is ready for operation.
- If it turns off shortly every 2 s: The power control of the charging converter has reduced the output capacity by more than 30 % (starter battery discharge protection, starting capacity is maintained), since the voltage of the starter battery dropped below the adjusted value for "Reduction of the charging capacity" (table 4).  
The charging capacity will be increased automatically, as soon as the voltage exceeds the value "increase of the charging capacity".
- If it is flashing:
  1. Disconnection by safety timer. Duration of the charging phase I was too long (15 hours) due to too many consumers or defective battery (short circuit of the cells).  
Reset only by removal of the signal at "D+ / Kl.15" (engine, ignition off).
  2. Internal unit failure (overheating), automatic reset after cooling down.
- Off: Charging converter in idle mode.

**All LEDs "Battery Full", "Main Charge", "Current", "Board OUT", "Start IN" and "Power" are flashing simultaneously:**



*The positions of the upper 4 selector switches (charging program acid, gel, AGM, LiFePO4) are incorrect. For reasons of safety, the unit has switched-off.*

Set the desired charging program battery type "Board" (design, technology), from page 11.



## Start-up and Function Test:

After connection and setting of the charging converter, the function can be tested:

1. Start the vehicle:
  - The charging converter will be activated and starts with 3% of the maximum charging capacity.
  - The LEDs "Power", "Start IN", "Board OUT" and "Main Charge" will be lighting, LED "Current" is lighting dimly.
2. Increase the speed of the vehicle to increase the voltage at the starter battery until it exceeds the adjusted value for the "increase of the charging capacity".
  - The charging capacity will be increased and is raised to the maximum value or to the required value of the charging characteristic line, if the board battery is already full.
  - The lighting intensity of the LED "Current" will be reduced or increased depending on the charging current.

### Tips:

*Unit does not start, the LED "Power" is not lighting:*

- a. Check the voltage at the activation input terminal "D+", > 8 V.
- b. In case of pure voltage control, check the voltage rates directly at the terminals according to table 4.

*Full charging current is not reached:*

- c. Check the adjustment of the slide switches "OUT Limit" according to table 2.
- d. Board battery is already charged: Turn on devices with high current draw.
- e. If required, deactivate the function "IN Limit" shortly for reasons of testing: Both switches to position "right".
- f. **Start IN** Sensor Cables ("VS-"/"VS+"), if used: Check connection, insulation, polarity.
- g. **Board OUT** Sensor Cables ("VB-"/"VB+"), if used: Check connection, insulation, polarity.
- h. **Never mix up the sensor cables Start IN** ("VS-"/"VS+") and **Board OUT** ("VB-"/"VB+"), otherwise the voltage control of the unit will be led astray: check.

*Full charging current is not reached, the LED "Start IN" is flashing:*

- i. Check the voltage at terminal +IN Start: >11.5 V. Increase the engine speed, in order that the charging converter is able to regulate to a higher voltage.
- j. Check cabling –Com, +OUT board and fuse I. Check cross-sections and lengths according to table 1. If used, check cables Vs- and Vs+, Vb- and Vb+, as well as stripped cable ends. Measure the voltage directly at the terminals/their screws.
- k. Check the cabling +IN Start, fuse 2, cross-sections and lengths (also "minus" connection to chassis, if required, cable "-Batt." from the starter to the board battery) according to table 1.
- l. Concealed battery cutoff relay (such as in EBL, EVS) bridges the charging converter: Check connection plan.

*Operation with EBL, EVS etc.:*

- m. The charging converter changes permanently between active and quiescent condition: "D+" must arrive directly from the vehicle, and not from the EBL.

## Function of the Power Control at Starter Battery and Generator:

The charging converter is voltage-controlled or activated via the control input "D+". It will be deactivated automatically if the engine is switched-off. It starts with 3 % of its achievable charging capacity.

The setting of the two slide switches "D+ / Vs and Low / High" (see tables 4, page 15) now affects the further load of the starter battery circuit supplying current to the charging converter.

After the engine start, also the starter battery shall be charged immediately and its starting capacity shall be maintained. Therefore, the charging converter does not start charging the board battery, before the voltage value "increase of the charging capacity" of the starter battery is reached.

The gradual increase of the charging capacity for the board battery by the charging converter will be effected, if the voltage value "increase of the charging capacity" of the starter battery is still reached and exceeded.

In case of strong load on the starter circuit due to many large consumers and the starter battery's voltage drops again below the value "reduction of the charging capacity", such as during engine idling, there will be a gradual reduction of the charging capacity for the board battery to relieve the starter circuit. But the minimum charging capacity will always be approx. 3 % of the achievable charging capacity.

If the voltage drops below the "Switching off threshold" for 30 seconds, the charging converter will be switched-off automatically. As soon as the voltage exceeds the threshold "increase of the charging capacity", the converter will be switched-on, and the capacity will be increased gradually until the required (maximum) charging capacity is reached.

A reduction of the charging capacity by more than 30 % due to insufficient input voltage of the generator will be indicated by a flashing LED "Start IN". The LED will turn off, as soon as the input voltage is sufficient or when the power requirement had dropped anyway due to a charged board battery.


The charging converter simulates a larger consumer load at the generator/starter circuit to ensure an activation also with Euro 6 vehicles with intelligent generators, if required.

## Chronological Sequence at the Board Battery (OUT):

### A new, complete main charging cycle will be executed:

- After a standstill of the generator or removal of the control signal "D+".
  - If the voltage of the starter battery has dropped below the adjusted switching off threshold for more than 30 seconds.
  - When the board battery is brought below the battery reset voltage for 30 seconds due to high load beyond the maximum charging current.
1. Activation of switched-off LiFePO4 batteries, charging aid for deeply discharged lead batteries, which will be subject to gentle preliminary charging to approx. 8 V.
  2. Maximum charging current (**phase I**) in the mean voltage range from 8 V to the beginning of the phase U1 for short charging times. The LED "**Main Charge**" is lighting, and approx. 75 % (lead), approx. 90 % (LiFePO4) of the capacity will be charged. The duration of phase I depends on the battery conditions, the load by the consumers and the charging state. The charging converter records the charging process. For reasons of safety, the phase I will be terminated by the safety timer after 15 hours, at the latest (cell defects etc.).
  3. In case of high battery voltage rates, the charging current will be slightly reduced for battery protection (orientation phase). After that, automatic switching to the following phase U1.
  4. During the **phase U1** (LED "**Main Charge**" is lighting), the battery voltage will be kept constant on a high level. The green LED "**Battery Full**" is flashing, and the additional high battery capacity will be charged. The battery charging current is decreased slowly while full charging is increasing. The charging converter controls the charging time and the charging current. From these values and from the course of charging being recorded during the phase I, the charging converter determines the **100 % full charge point** of the battery for automatic switching to U2. In contrast to conventional voltage transformers or boosters with fixed default values for charging current commutation, an unnecessary long phase U1 is avoided, which might be caused by consumer loads being possibly also supplied, and which are falsifying the charging current. LED "**Main Charge**" will stop lighting.
  5. **Phase U2** (LED "**Battery Full**" is lighting permanently): The charging converter has now switched to the lower voltage for trickle charge maintaining 100 % charge of the battery. Only the low compensating recharging current is flowing, which is determined by the battery, and which is required for constant conservation of the full charge.

**Note:** During the **phases U1, U2** (battery full) almost the **total charger current is available for additional supply of consumers** without any discharge of the battery.

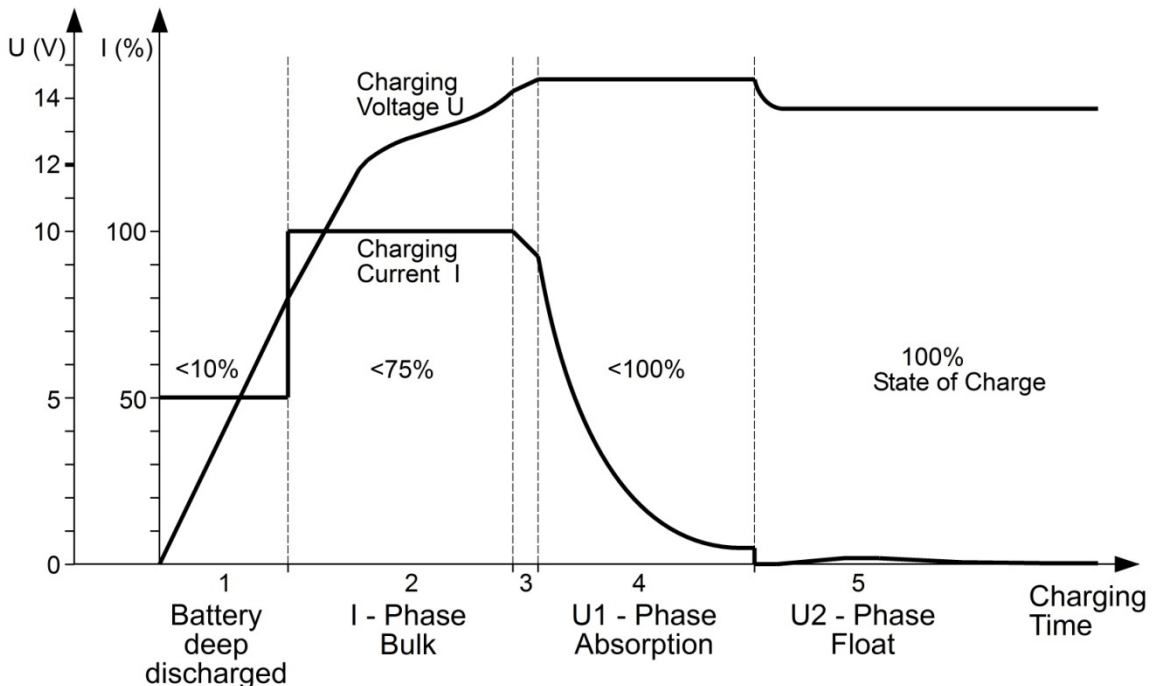



### Safety Regulations and Appropriate Application:

The charging converter has been designed according to the valid safety regulations.

Appropriate application is restricted to:

1. **Charging of lead-gel, lead-AGM, lead-acid or LiFePO4 complete batteries (with integrated BMS, balancing, safety circuit and approval!) Charging of batteries of the indicated nominal voltage and simultaneous supply of the consumers being connected to these batteries in fixed installed systems with the indicated battery capacities and charging programs.**
2. **Simultaneous supply of consumers being connected to these batteries in fixed installed systems.**
3. **Connection in consideration of the indicated cable cross-sections at the inputs and outputs of the unit.**
4. **Connection in consideration of the indicated battery capacities at the inputs and outputs of the unit.**
5. **Fuses of the indicated capacity are to be provided near the battery to protect the cabling of the batteries.**
6. **Technically faultless condition.**
7. **Installation in a well-ventilated room, protected from rain, humidity, dust, aggressive battery gases, as well as in an environment being free from condensation water.**

**Never use the unit in locations where the risk of gas or dust explosion exists!**

- Open-air operation of the unit is not allowed.
- Lay the cables in a way, that damage is avoided and observe to fasten them tightly.
- Never lay 12 V cables and 230 V mains supply cables into the same cable conduit (empty conduit).
- Check live cables or leads periodically for insulation faults, points of break or loosened connections. Occurring defects must be remedied immediately.
- The unit is to be disconnected from any connection prior to execution of electrically welding or work on the electric system.
- If the non-commercial end-user is not able to recognize the characteristic values being valid for a unit or the regulations to be observed, a specialist is always to be consulted.
- The user / buyer is responsible for the observation of construction and safety regulations of any kind.
- **The unit does not contain any parts, which can be replaced by the user.** Even after having been switched-off, the unit may be live for an extended period (particularly in case of failure).
- Keep children away from the unit and the batteries.
- Observe the safety regulations of the battery manufacturer; deaerate the battery room.
- Non-observance may result in injury or material damage.
- The warranty period is 36 months from the purchase date (against presentation of the sales slip or invoice).
- The warranty will be void in case of any inappropriate utilisation of the unit, if it is used beyond the technical specification, in case of improper operation or external intervention. We do not assume any liability for any damage resulting hereof. The liability exclusion is extended to any service being executed by third, which has not been ordered by us in writing. Service is to be effected exclusively by VOTRONIC Lauterbach.



### Declaration of Conformity:

In accordance with the provisions of Directives 2014/35/EU, 2014/30/EU, 2009/19/EC, this product complies with the following standards or normative documents:

EN55014-1; EN55022 B; EN61000-6-1; EN61000-4-2; EN61000-4-3; EN61000-4-4; EN62368-1; EN50498.



Disposal of the product in the household waste is not allowed.



The product conforms to RoHS. It complies with the directive 2011/65/EU for Reduction of Hazardous Substances in electrical and electronic equipment.

**Quality Management  
System**

**DIN EN ISO 9001**

**Technical Data:**

**VCC 1212-50**

**VCC 1212-70**

**VCC 1212-90**

**Input from the vehicle starter battery "+ IN Start":**

Nominal Voltage Vehicle STARTER Battery:	12 V	12 V	12 V
Min. Battery Capacity (Size), recommended:	60 Ah	80 Ah	100 Ah
Input Voltage Range (EURO 6+), D+, controlled:	10.5 - 16.5 V	10.5 - 16.5 V	10.5 - 16.5 V
Input Overvoltage Disconnection (EURO 6+), max.:	16.5 V	16.5 V	16.5 V
Power Consumption max.:	760 W	1085 W	1350 W
Current Draw (at lowest input voltage) max.:	0.1 A - 68 A	0.1 A - 95 A	0.1 A - 125 A
Current Draw Limited, 3 Switch Positions "IN Limit":	49 A, 42 A, 33 A	77 A, 63 A, 50 A	100 A, 82 A, 64 A
Auxiliary Charging, Charge/Trickle Charge 12 V Starter Battery for External Mains Charging Mode, Switch Position "B":	0 - 3 A	0 - 5 A	0 - 5 A
Activation Control Input "D+", from D+, Terminal 15, Ignition:	8 - 16.5 V	8 - 16.5 V	8 - 16.5 V
IN "Start" Voltage Sensor Cables "Vs-" and "Vs+":	Yes / Yes	Yes / Yes	Yes / Yes
Terminal "TR", Signal for Bypass Relay / max.:	12 V / 1 A	12 V / 1 A	12 V / 1 A

**Charging Port at the Board Supply Battery "+ OUT Board":**

Charging/Floating/Load Curr., controlled, IU1oU2, Lead, LiFePO:	0 A - 50 A	0 A - 70 A	0 A - 90 A
Reduction at Switch Position "OUT Limit":	0 A - 39 A	0 A - 50 A	0 A - 75 A
<b>Lead-Acid, Gel, AGM Batteries</b> Nominal Voltage:	12 V	12 V	12 V
Capacity (Battery Size), recommended/up to:	75-320/440 Ah	100-460/620 Ah	150-600/800 Ah
Lead Charging Programs Stored in the Memory:	4	4	4
Prelim. Charg. Current (Deeply Discharged Batt. <8 V) max:	25 A	35 A	45 A
Safety Charging Voltage at Battery Overtemperature:	12.80 V	12.80 V	12.80 V
<b>LiFePO4 Battery</b> Nominal Voltage:	12 V, 12.8-13.3 V	12 V, 12.8-13.3 V	12 V, 12.8-13.3 V
Capacity (Battery Size), recommended/up to:	75-320/440 Ah	100-460/620 Ah	150-600/800 Ah
LiFePO4 Charging Programs Stored in the Memory:	4	4	4
Safety Charging Voltage at Battery Overtemperature:	12.80 V	12.80 V	12.80 V
Input "T T" for Battery Temperature Sensor "Board":	Yes	Yes	Yes
OUT "Board" Voltage Sensor Cables "Vb-" and "Vb+":	Yes / Yes	Yes / Yes	Yes / Yes
Quiescent Current, Standby:	16 mA	16 mA	16 mA
Charging Timer:	3-fold	3-fold	3-fold
Ripple Factor Voltage:	< 30 mV rms	< 30 mV rms	< 30 mV rms
Limit of Charging Voltage "+OUT Board" (Consumer Protection):	15.00 V	15.00 V	15.00 V
External Overvoltage Disconnection "+OUT Board" (20 sec.):	15.50 V	15.50 V	15.50 V
Safety Protection against Short-circuit/Back Discharge:	Yes	Yes	Yes

Fitting Position of Unit:	any	any	any
Temperature Range:	-20/+45 °C	-20/+45 °C	-20/+45 °C
Speed-controlled, Temperature-controlled Fan:	Yes	Yes	Yes
Gradual Reduction of Charging Capacity at Overtemperature:	Yes	Yes	Yes
Safety Disconnection in Case of Overheating:	Yes	Yes	Yes
Connection "Display":	Yes	Yes	Yes
Connection "BUS" for VBS Bus:	Yes	Yes	Yes
Dimensions (L x W x H):	135 x 160 x 72 mm	205 x 160 x 72 mm	205 x 160 x 72 mm
Weight:	950 g	1300 g	1480 g
Ambient Conditions, Humidity of Air:	max. 95 % RH, no condensation		

**Delivery Scope:**

- Charging Converter
- Operating Manual
- Temperature Sensor 825

Temperature Sensor 825



**Available Accessories:**

- |   |                |
|---|----------------|
| • High-capacity Cutoff Relay 12 V / 200 A | Order No. 2201 |
| • Switching Relay 12 V / 60 A             | Order No. 2202 |
| • LED Remote Control S                    | Order No. 2076 |
| • LCD-Charge Control S-VCC                | Order No. 1248 |

Subject to misprints, errors and technical modification without notice.

All rights reserved, particularly the right of reproduction. Copyright © VOTRONIC 04/18.

Made in Germany by VOTRONIC Elektronik-Systeme GmbH, Johann-Friedrich-Diehm-Str. 10, 36341 Lauterbach/GERMANY  
 Phone: +49 (0)6641/91173-0 Fax: +49 (0)6641/91173-20 E-mail: info@votronic.de Internet: www.votronic.de